

ICT PRT-KLCS Keypad

Manual



By




TOTAL SECURITY™



Table of Contents

Keypad Layout.....	- 1 -
Arming via the Keypad	- 2 -
Disarming via the Keypad	- 4 -
User Notes	- 5 -
Support	- 6 -

Keypad Layout

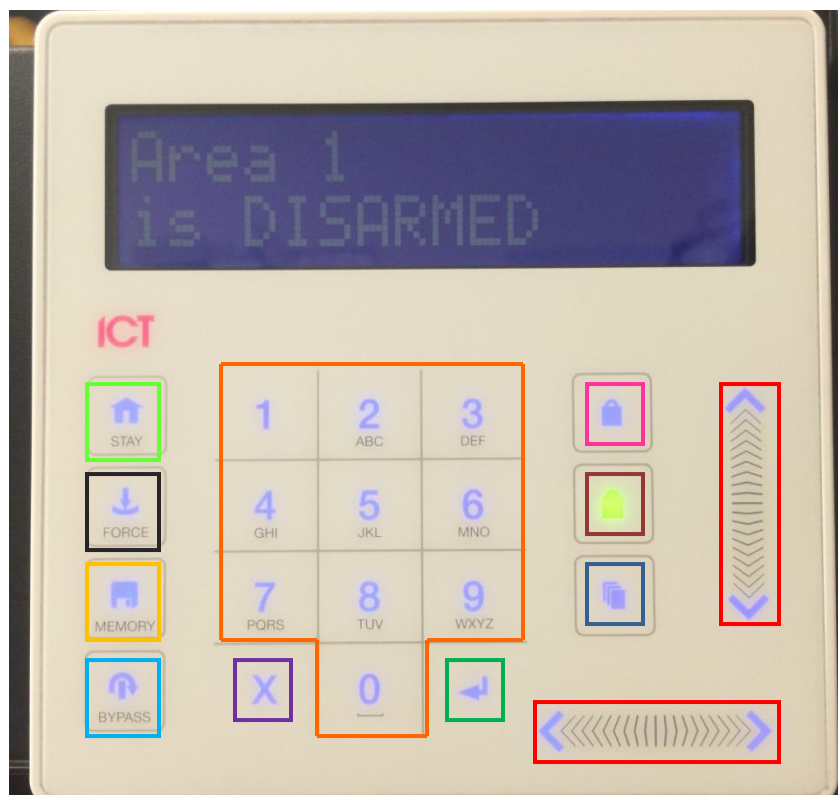

CLEAR – Logs user off of the keypad or will refresh the DISPLAY.

BYPASS – Ignores a particular zone when arming for this instance.

MEMORY – Will display alarm history to the user.

FORCE – Will arm a system regardless of the status it's in.

STAY – Begins the stay arming process on specified zones.

NUMPAD – Used for entering PIN codes and commands.

ENTER – Acknowledge action, clear alarm memory or move to the next screen.

SCROLL PADS – Use for browsing options in the keypad.


DISARM – Will disarm the system and indicates if the system is disarmed.

MENU – Shortcut to access the MENU display.


ARM – Will begin the arming process or indicate the system is armed.

Arming via the Keypad



1. If the system/area you are in is disarmed, the DISPLAY will state [Area Name] is DISARMED and the disarm icon will be green.

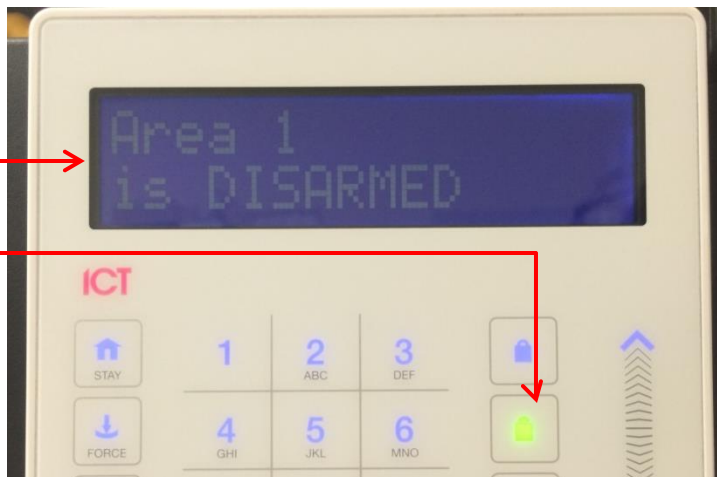


2. Use the NUMPAD to enter in your PIN code then press ENTER. If the login is accepted a greeting will be displayed before it returns to the main menu.

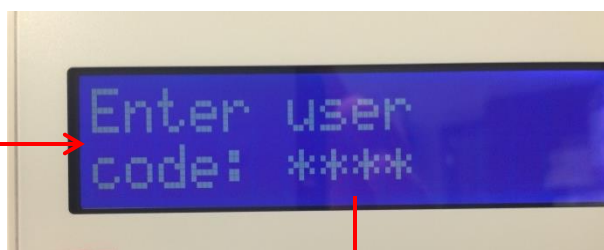

3. Press the ARM key to begin the arming process. It will be checking the zones for faults or if any are tripped.

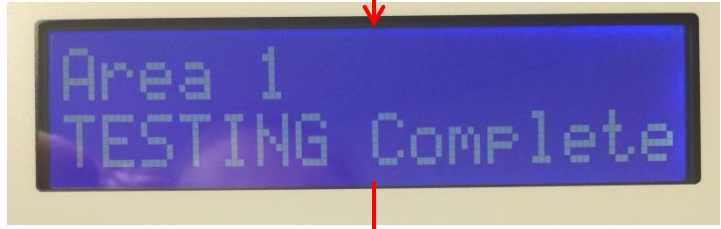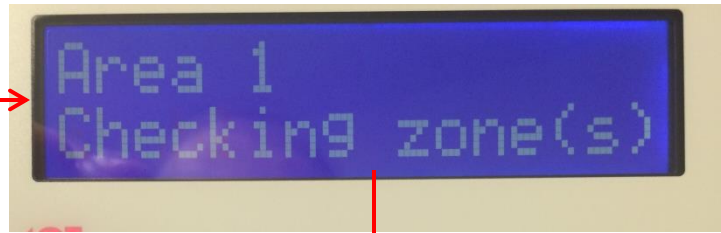

4. Once the check is complete it will begin the Exit Delay. You'll then have a limited time to exit the area. The default sending is 45 seconds but this can be changed to your preference.

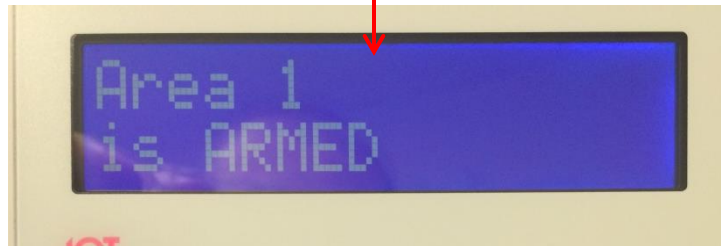


Disarming via the Keypad

1. When you trip a zone (opening a monitored door, walking in front of a monitored motion, etc.) Will go into the Entry Delay by default you have 30 seconds to disarm the system.



2. To disarm the system, enter your PIN and press **ENTER**. Once it confirms that you are logged in, press the **DISARM**. Depending on your setup, you might only need to login. It can be configured to auto-disarm upon a valid user login at the keypad.

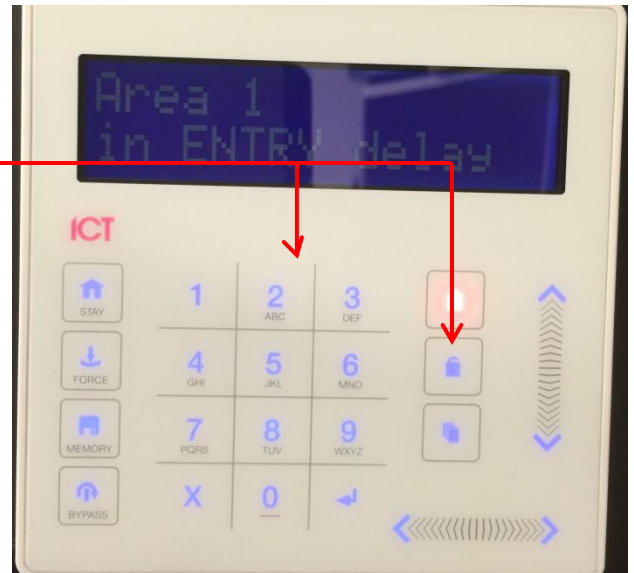

3. Once disarmed, it will display [Area Name] is DISARMED as will be at the main menu. Another indicator is the disarm LED will be green.



Support

24/7 Contact Info

952-887-1144

support@floydtotalsecurity.com